



Your PC may look different from the ones shown here.
Component, connector location, type, and number vary by model.

您的電腦外觀可能與下圖所示的電腦不同。
各個型號的組件、接頭位置、類型和編號亦不相同。

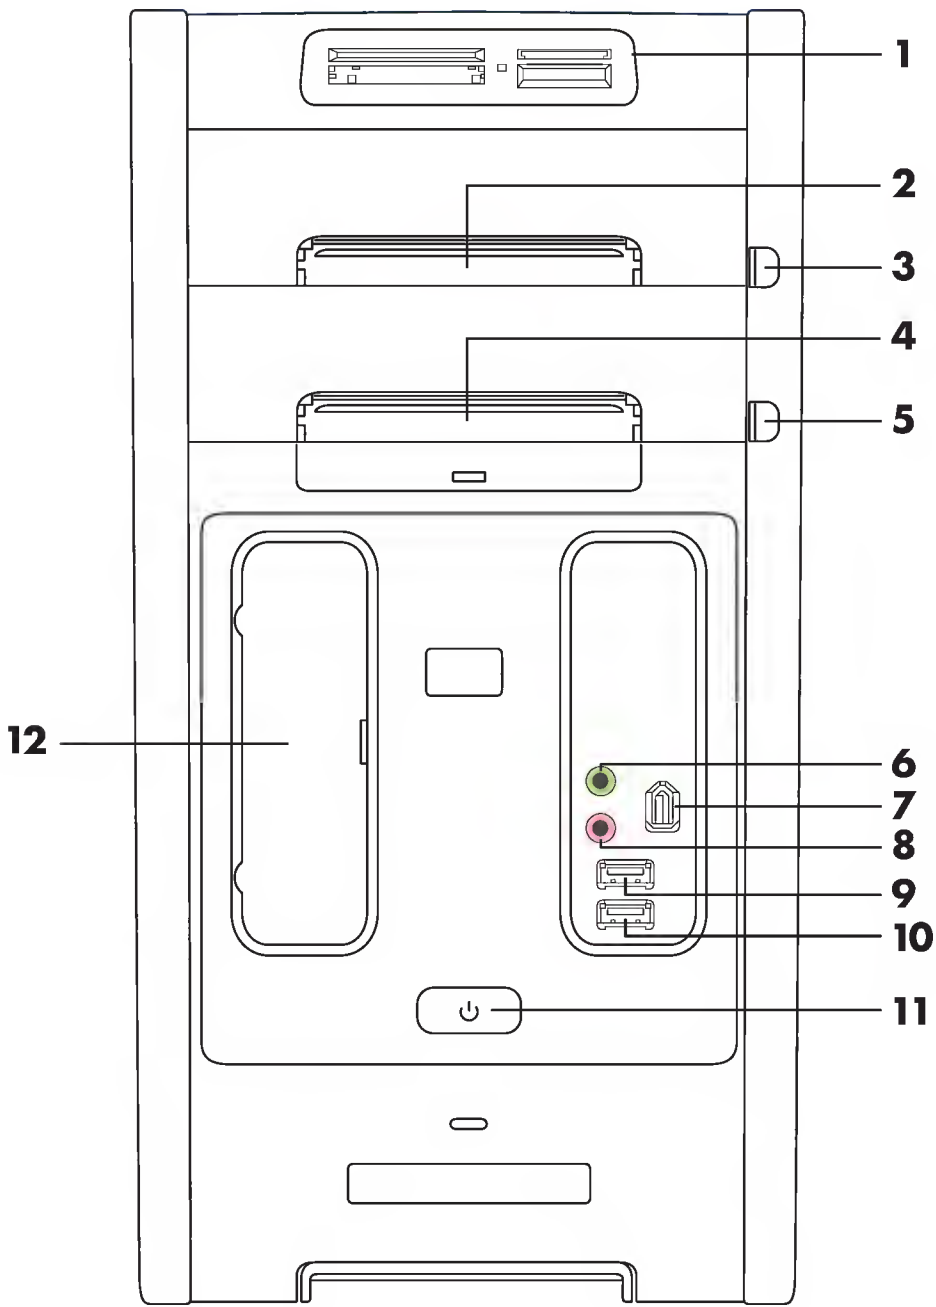

- 1 — Memory Card Reader
- 2 — Optical drive 1
- 3 — 1st Optical drive Eject button
- 4 — Optical drive 2
- 5 — 2nd Optical drive Eject button
- 6 — Headphone (Audio Line Out)
- 7 — FireWire (IEEE 1394) port
- 8 — Microphone
- 9 — USB 2.0
- 10 — USB 2.0
- 11 — On button/indicator
- 12 — HP Personal Media Drive bay

- 1 — 讀卡機
- 2 — 光碟機 1
- 3 — 光碟機 1 的「退出」鈕
- 4 — 光碟機 2
- 5 — 光碟機 2 的「退出」鈕
- 6 — 耳機 (音訊音源輸出孔)
- 7 — FireWire (IEEE 1394) 連接埠
- 8 — 麥克風
- 9 — USB 2.0
- 10 — USB 2.0
- 11 — 主機開關按鈕/指示燈
- 12 — HP Personal Media Drive 托槽

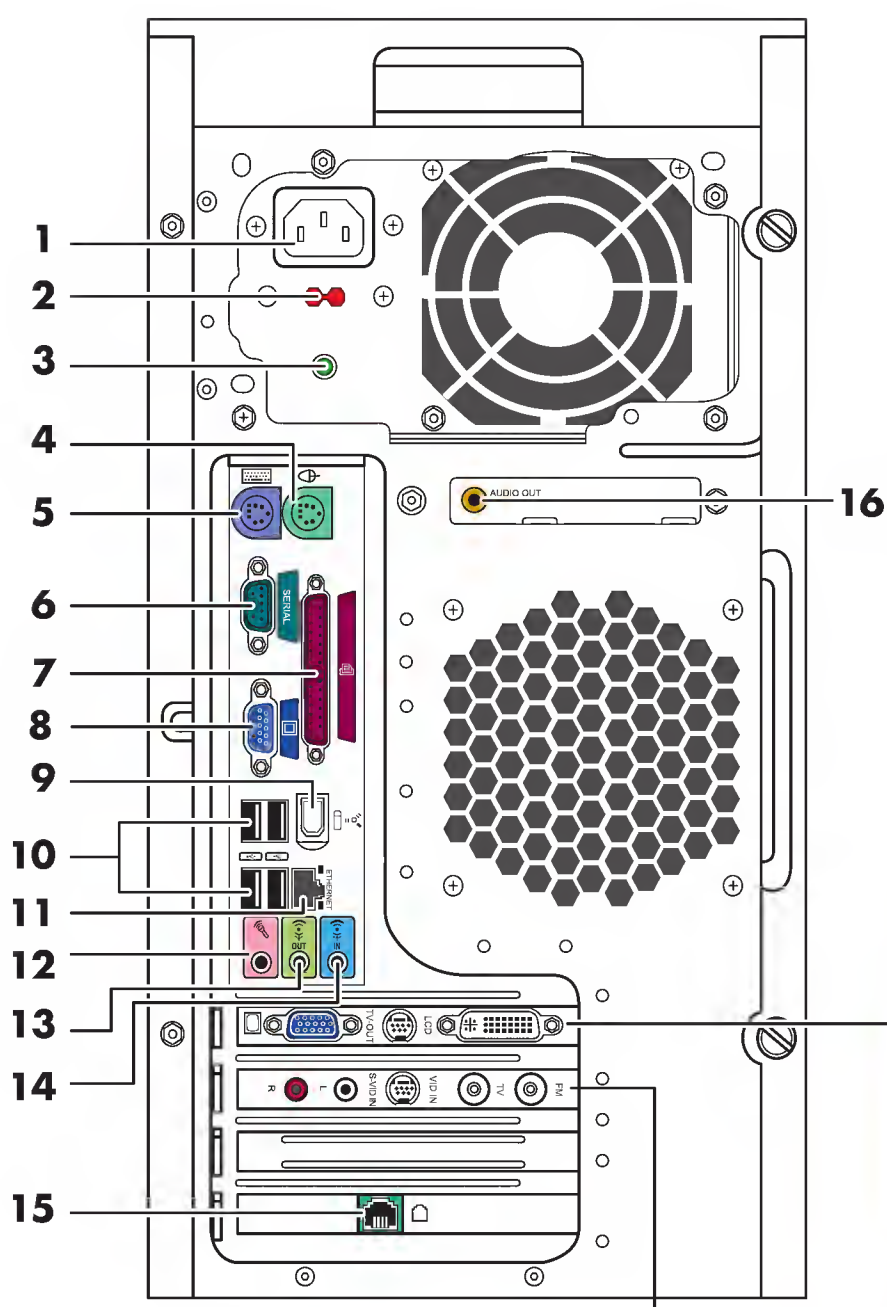

- 1 — Power Cord connector
- 2 — Voltage selector
- 3 — Power LED
- 4 — PS/2 Mouse connector
- 5 — PS/2 Keyboard connector
- 6 — Serial port
- 7 — Parallel port
- 8 — VGA monitor port
- 9 — FireWire (IEEE 1394) port
- 10 — 4 USB 2.0 ports
- 11 — LAN (Ethernet)

- 12 — Microphone connector
- 13 — Audio Line Out
- 14 — Audio Line In
- 15 — Modem (select models only)
- 16 — Digital Audio Out
- 17 — S-video (TV Out)
- 18 — LCD DVI connector (select models only)
- 19 — Audio in right
- 20 — Audio in left
- 21 — S-video In
- 22 — TV/RF-In antenna/Cable connector

- 23 — FM-In radio antenna connector (select models only)
- 24 — Digital Audio In
- 25 — Side speaker port
- 26 — Rear speaker port
- 27 — Center speaker/subwoofer port

- 1 — 電源線插孔
- 2 — 電壓選擇開關
- 3 — 電源 LED
- 4 — PS/2 滑鼠接頭
- 5 — PS/2 鍵盤接頭
- 6 — 序列埠
- 7 — 並列埠
- 8 — VGA 顯示器連接埠
- 9 — FireWire (IEEE 1394) 連接埠
- 10 — 4 個 USB 2.0 連接埠
- 11 — LAN (乙太網路)

- 12 — 麥克風插孔
- 13 — 音訊音源輸出孔
- 14 — 音訊音源輸入孔
- 15 — 數據機 (僅限於部分型號)
- 16 — 數位音訊音源輸出孔
- 17 — S-video (TV 輸出)
- 18 — LCD DVI 插孔 (僅限於部分型號)
- 19 — 右側音訊音源輸入孔
- 20 — 左側音訊音源輸入孔
- 21 — S-video 輸入
- 22 — TV/RF-In 天線/連接線接頭

- 23 — FM-In 收音機天線接頭 (僅限於部分型號)
- 24 — 數位音訊音源輸入孔
- 25 — 側置喇叭連接埠
- 26 — 後置喇叭連接埠
- 27 — 中置喇叭/重低音喇叭連接埠

Select models only
僅限於部分型號

